

Warranty card

32B

Convert EAN-13 to ISBN/ISSN on



00481

Convert EAN-13 to ISBN/ISSN off



00480

EAN-8

On



00371

Off



00370

Convert EAN-8 to EAN-13 on



004C1

Convert EAN-8 to EAN-13 off



004C0

UPC-E0

On



00351

Off



00350

Convert UPC-E0 to EAN-13 on



004D1

Convert UPC-E0 to EAN-13 off



004D0

Convert UPC-E0 to UPC-A on



00381

Convert UPC-E0 to UPC-A off



00380

6

Enable UPC-E0 System Character Transmission



004G1

Disable UPC-E0 System Character Transmission



004G0

CODE39

On



00221

Off



00220

Check On



00241

Check Off



00240

Check Digit Transmission On



00251

Check Digit Transmission Off



00250

Enable All ASCII Characters



00231

Disable All ASCII Characters



00230

Enable Start Character



00281

Disable Start Character



00280

CODE128

7

On



00691

Off



00690

CODE93

On



00621

Off



00620

Interleaved 25

On



00961

Off



00960

Other 25

Enable Industrial 25



01061

Disable Industrial 25



01060

Enable China Post 25



010A1

Disable China Post 25



010A0

Enable Standard 25



010B1

Disable Standard 25



010B0

8

Add Prefix and Suffix

Add Suffix---LF



02C0000000\$0A

Add Suffix---CR



02C0000000\$0D

Add Suffix---CR+LF



02C0000000\$0A\$0A

Add Prefix---TAB



02B0000000\$09

Add Prefix---STX



02B0000000\$02

Add Suffix---ETX



02C0000000\$03

Reset Prefix Setting



0B2B000

Reset Suffix Setting



0B2C000

9

Barcode Scanner

User Manual

32B

Introduction:

This Barcode Scanner provides an accurate,easy and fast completely solutions of data entry and storage for computer information systems.

The company has another technique of infrared rays with auto-sensor mode.

The product has manual and auto-sensor two working modes.

The scanner works normally after installation of device driver for USB interface.

The product offers integrated interfaces ways to any host computer systems, interfaces are as below:

Keyboard
RS-232
USBHID
VCOM

All the operating parameters are programmed by scanning the setting bar codes and stored in EEPROM, which can retain the settings after the device is power off.

For the functions which are not listed in this menu, please consult your supplier for more details.All rights,including the right of final interpretation is reserved by the company.

Reset Configuration to Defaults

Output Firmware Version



0B

Speaker



0A

Speaker On

Speaker Off



0B142



014200

Auto-Sensor Mode Option

On

Off



001901



001900

Transmission Mode

USBHID



000600

1



000601



000602



000603

Reading Mode

Level Trigger Mode



013300

Pulse Trigger Mode



013301

Level Trigger Continuous Scan



013302

Pulse Trigger Continuous Scan



013303

Continuous Scan



013304

Blink Mode



 
013305



01801



01802



01803

2



01804



0005000



0005007



0005008



0005021



0ms



0000000



100ms



250ms



0000025



000705



115200



000708



001200

3



001201



001202



7 Data Bits



8 Data Bits



00081



1 Stop Bit



00090



2 Stop Bits



00091



None



00100



Odd



00101



00102



Reset UART

0B010

000A0

4



000A1



000A2



Normal Data



000C0



On



00341



 
Off



00340



00391



00390



003A0



On



00361



Off



00360

5

Dear customer:thank you for purchasing our product,please take care of this card, and please show this card when you need our maintenance.

User Name:		Tel		Fax	
Model No.		Series No.			
Buy date	Y	M	D	(Are subject to the formal receipt)	
Maintenance principles:					
a. During warranty period,we offer free maintenance if the problem is covered by our warranty.					
b. If the problem is out of ourwarranty scope or if the item is beyond the warranty period. We will charge the maintenance fee and relevant expense of part replacement.					
c. Users are not responsible for the product problem caused directly or indirectly by us or distributors.					
d. The warranty of scanner is one year, which is not including the cable.					
The terms out of warranty liability are listed as following:					
a. Problem or damage caused by uer's improper operation.					
b. Damage caused by any operation in improper environment.					
c. Damage caused by force majeure(include but not limited to earthquake, water flood, fire and so on).					
d. Remove the protective housing by unauthorized person.					
e. Damage caused by delivery that the item was sent back to us.					

Distributor fill in stamp	Distributor		
	Address		
	Tel		
	Fax		
	QQ No		
	Email		
	Web		
	Handled by		
date	Y	M	D /stamp

